


AVAILABLE FROM:

EcoDepot, LLC
1405 Benson Ct, Suite D
Arbutus, MD 21227
Phone: (443) 304.3317
Www.ecodepotsales.com
info@ecodepotsales.com

TreeMat

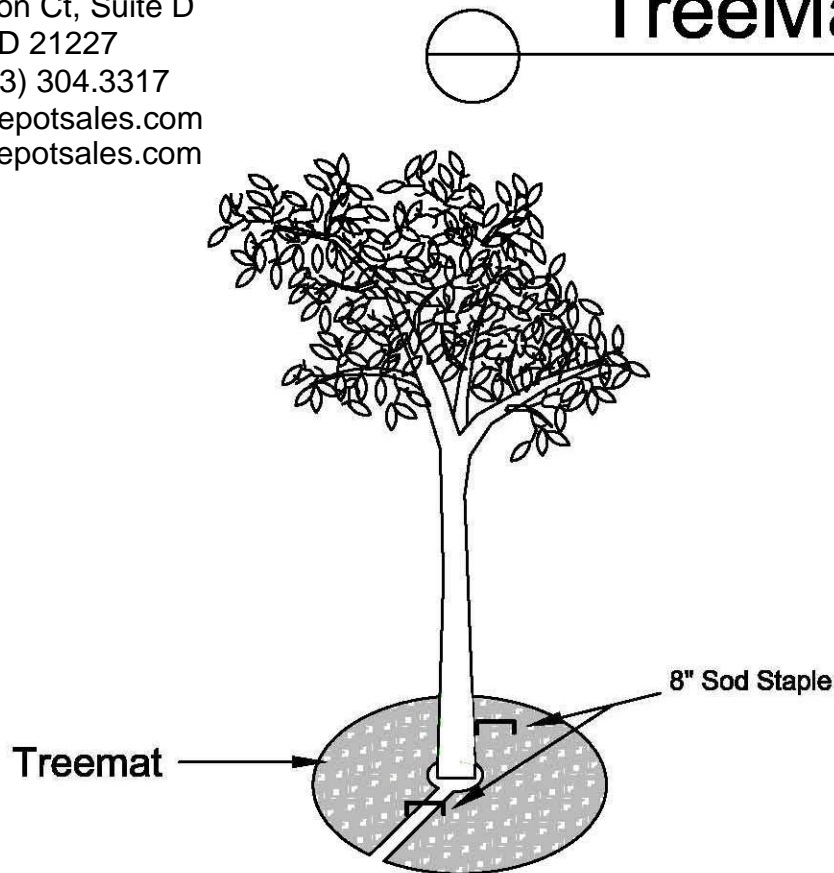

INSTALLATION GUIDELINES:

1. PLANT TREE ACCORDING TO STANDARD SPECIFICATIONS.
2. GRUB ALL GRASS IN AREA WHERE TREEMAT WILL BE PLACED.
3. PLACE TREEMAT AROUND TREE AND SECURE WITH SOD STAPLES.
4. IF INSTALLING ON STEEP SLOPE, ADDITIONAL STAPLES MAY BE NEEDED.

PRODUCT NOTES:

1. TREEMAT MUST BE COMPOSED OF 100% BIODEGRADABLE, MACHINE-COMPRESSED COIR FIBER WITH 100% BIODEGRADABLE RUBBER COATING ON ONE SIDE.
2. TREEMAT MUST HAVE A CENTER OPENING AND RADIAL SLIT.
3. TREEMAT MUST BE A MINIMUM OF 1/2" THICK.

RECOMMENDED SIZING:

- 12" TREEMAT - FOR USE WITH TUBELINGS AND BARE ROOT MATERIAL
16"-24" TREEMAT - 1 GALLON AND 3 GALLON CONTAINERIZED TREES/SHRUBS
30" TREEMAT - 5 GALLON CONTAINERS OR 1 INCH CALIPER TREES
36" TREEMAT - 2 INCH CALIPER TREES