




www.EcoDepotSales.com

## STACKED EZ-LOG™ INSTALLATION with COIR MATTING ABOVE

Cut slot in bank to allow log to be 4" above average water surface level. Lap matting under log and lay over first log temporarily. Stake through pre-drilled holes in first log with 4" oak stakes (4 foot). Back fill with soil and tamp firmly to 4" from top of first log. Repeat installation with second log, but wrap coir matting around face of second log.

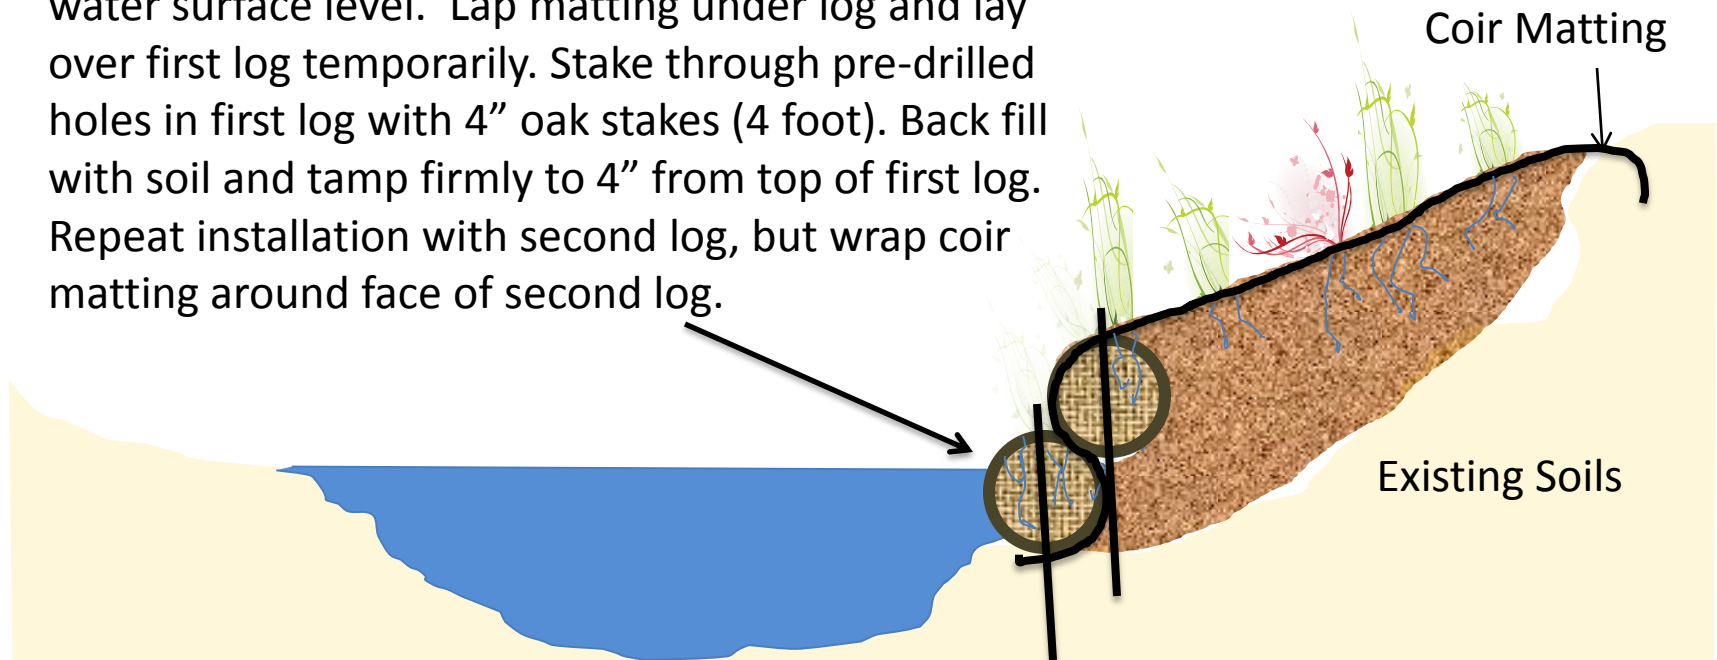

Complete fill behind logs to slope desired, hand tamp every 8". Lay matting on top of fill and toe in 12" at top. Install 6" landscape staples 3' on center through mat. Seed with native grass mix and plant. Native plantings should occur directly behind log to encourage rooting into log.